

# HEATING INSTRUCTIONS

## MAIN HALL HEATERS

The controls are in the Meter Cupboard next to the entrance

There are separate controls for the Large and Small Room heaters.

Use the left hand button (marked with radiator symbol) to control the Large Room Heaters

Use the right hand button (marked with a Tap Symbol) to control the Small Room Heaters

On arrival turn on the required heaters – Large Room, Small Room or Both

1. Press the +HR button once for 1 hour, press again for 2 hours and again, if needed, for 3 hours (Selected time is shown on screen above the button).
2. If the heaters turn off at the end of selected period and further heating is needed turn the heaters on again by pressing the +HR button for say 1 hour.

NOTE the heaters will turn off if the temperature reaches the maximum thermostat setting

3. If the heaters are still on at the end of your use press the appropriate ADV button(s) which will turn off the heaters.

Individual heaters can be turned off by using their switch BUT turn on again before you leave.

Do not change the controls on individual heaters, the Room Thermostat Controls or Programming pre-sets.

## HEATERS IN ENTRANCE HALL AND KITCHEN

These are not controlled by the programme – see instructions next to each heater.

## WHEN YOU LEAVE

Ensure no heating is on either in the hall rooms, the entrance or the kitchen.

Check also that, if used, the kitchen water heater and boiler are turned off

Any problems please contact George Bateman 01609 771169 or 07929318129